




LOKI Σ

HIGH FIDELITY TONE CONTROL

IN NORSE MYTHOLOGY, LOKI IS THE TRICKSTER GOD.
LIKE THE TRICK OF IMPROVING IMPERFECT AUDIO SYSTEMS.
BECAUSE, LET'S FACE IT: NO TRANSDUCER OR RECORDING IS PERFECT.
AND YOU MIGHT HAVE YOUR OWN IDEAS ABOUT SONIC PERFECTION.
ENJOY LOKI, THE HIGH-FIDELITY TONE CONTROL

OWNER'S MANUAL

GETTING CONNECTED

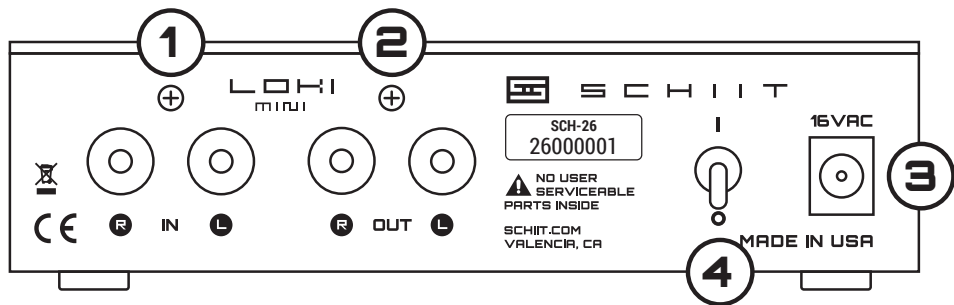

Where to put Loki? You can connect Loki either in-between your source and preamp (if you have a single source) or between the preamp and power amp (so it can be used with all sources.)


1 Input Jacks. Connect your source or preamp to Loki's "IN" RCA jacks with high-quality RCA cables. Or you can use crappy cables (but why?)

2 Output Jacks. Connect the "OUT" RCA jacks to your preamp or power amp, again with good cables.

3 Power Input. Connect the supplied wall-wart cable to the jack labeled "16VAC." Do not use any other wall-wart, or bad things might happen.

4 Power Switch. Turn on the switch. The protection relay will mute the output for 8-10 seconds, then it will engage with a click.

OPERATION

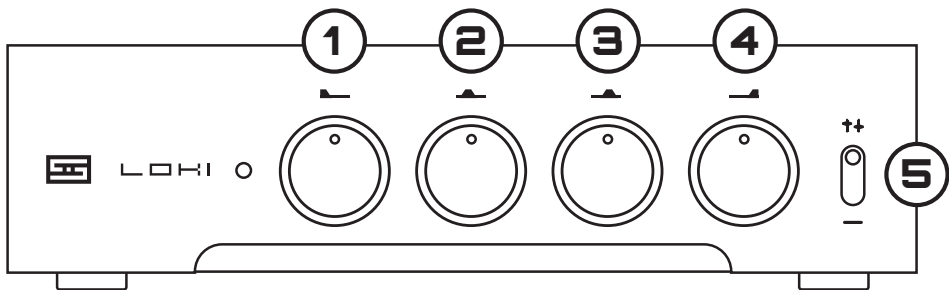

1 Bass Adjustment. (20Hz) Turning the knob clockwise increases bass, turning it counterclockwise decreases bass. Like all the adjustments on Loki, it has a gradual effect when first turned off of the center position, for subtle adjustments.

2 Midbass Adjustment. (400Hz) As before, clockwise increases, counter-clockwise decreases.

3 Midrange Adjustment. (2kHz) You've got the clockwise/counterclockwise thing now, right?

4 Treble Adjustment (8kHz). Clockwise = more, counterclockwise = less.

5 Bypass. Up = tone control active, down = completely bypassed (only a relay and resistor in the signal path.)

Note: when Loki is turned off it is technically bypassed, but the unpowered input may cause distortion in some systems. Best to turn it on and switch it to bypass the tone controls.

2-YEAR LIMITED WARRANTY

Schiit Audio warrants to the original purchaser that this product shall be free from defects in material and workmanship for two (2) years from the date of purchase. If a defect covered by this warranty occurs during this period, Schiit Audio will repair the defective product, free of charge. Date of purchase will be based on customer receipts, otherwise date of manufacturing will be used.

If you believe you need warranty service, contact us first. Schiit Audio products sent back to us without a Return Authorization (RA) will be returned to the sender without repair. To contact us and obtain an RA, email tech@schitt.com.

Warranty Limitations. This warranty shall not apply if a product: (a) is modified or tampered with; (b) is damaged by negligence, accident, unreasonable use, or other causes unrelated to defective materials or workmanship, or (c) has had the serial number altered or removed.

Any implied warranties, including warranties of merchantability and fitness for a particular purpose, are hereby limited in duration to the warranty period of 2 years. In no event shall Schiit Audio be liable for consequential or incidental damages resulting from the breach of any implied or expressed warranties. Some state do not allow these limitations, so they may not apply to you. You may also have other rights which vary from state to state or province to province.



Application for Council Directives 72/23/EEC
Conformity declared for EN60065, EN50082-1



S C H I I T

IN THE BOX

- (1) Loki Mini
- (1) Wall-Wart
- (0) Stick-On Feet
(they're pressed in)

SCHIIT.COM
TECH@SCHIIT.COM